



Acoustical Surfaces, Inc.

SOUNDPROOFING, ACOUSTICS, NOISE & VIBRATION CONTROL SPECIALISTS

123 Columbia Court North • Suite 201 • Chaska, MN 55318

(952) 448-5300 • Fax (952) 448-2613 • (800) 448-0121


Email: sales@acousticalsurfaces.com

Visit our Website: www.acousticalsurfaces.com


We Identify and S.T.O.P. Your Noise Problems

Installation Instructions: Acoustical Pipe and Duct Lagging (B-10 LAG, B-10 LAG/QFA-3, B-10 LAG/QFA-9, B-20 LAG, B-20 LAG/QFA-3, B-20 LAG/QFA-9)

1. Determine the circumference of the duct or pipe to be wrapped. Note additional length required to accommodate thickness of material. Add 2–4 inches overlap of product onto itself. (Note: Quilted Fiberglass side goes up against the Duct or Pipe)
2. Utilizing standard 54" wide rolls, cut length as determined above.
3. After cutting piece from roll install first section on the duct or pipe. Drape the cut piece over the pipe or duct with equal parts of the product hanging over each side. One side is then brought up and adhered to the pipe or duct with a foil lag tape. The other side is then brought up, making sure to overlap the first side, and secured with tape. This method allows for circumferential seams approximately every 50" to 52", and a single seam running along the bottom of the pipe or duct.

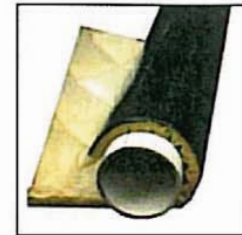

1. Add additional wraps of tape around circumference as required to snug lagging to pipe or duct.
2. Where specified or as required banding should be installed in addition to tape to secure lag to pipe or duct.
3. On large rectangular ductwork, a mechanical fastener such as stick pins or weld pins should also be utilized, with additional emphasis on supporting product across the bottom to prevent sagging.
4. Cut and install the next section in the same fashion. Each progressive section should overlap the previous section by 2 inches (+/-). Tape this seam with a 4" wide foil lag tape.

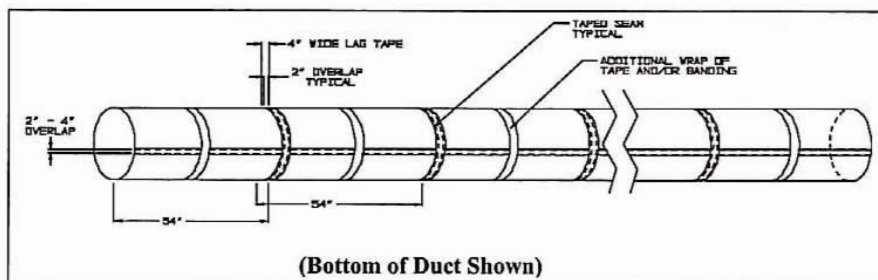

5. When covering an elbow the usual method is to "gore" the product (as typical in sheet metal construction). See page 2 for instructions.
6. In all cases the important element is to assure there are no gaps or leaks whatsoever.

Note: When LAG products are used on outdoor applications aluminum sheathing should be applied over the finished installation. As an alternate, our BBC-15 & BBC-15-2" acoustical composites are suitable for outdoor applications and do not require an outer aluminum jacket.



Acoustical Surfaces, Inc.

SOUNDPROOFING, ACOUSTICS, NOISE & VIBRATION CONTROL SPECIALISTS


123 Columbia Court North • Suite 201 • Chaska, MN 55318

(952) 448-5300 • Fax (952) 448-2613 • (800) 448-0121

Email: sales@acousticalsurfaces.com

Visit our Website: www.acousticalsurfaces.com

We Identify and S.T.O.P. Your Noise Problem

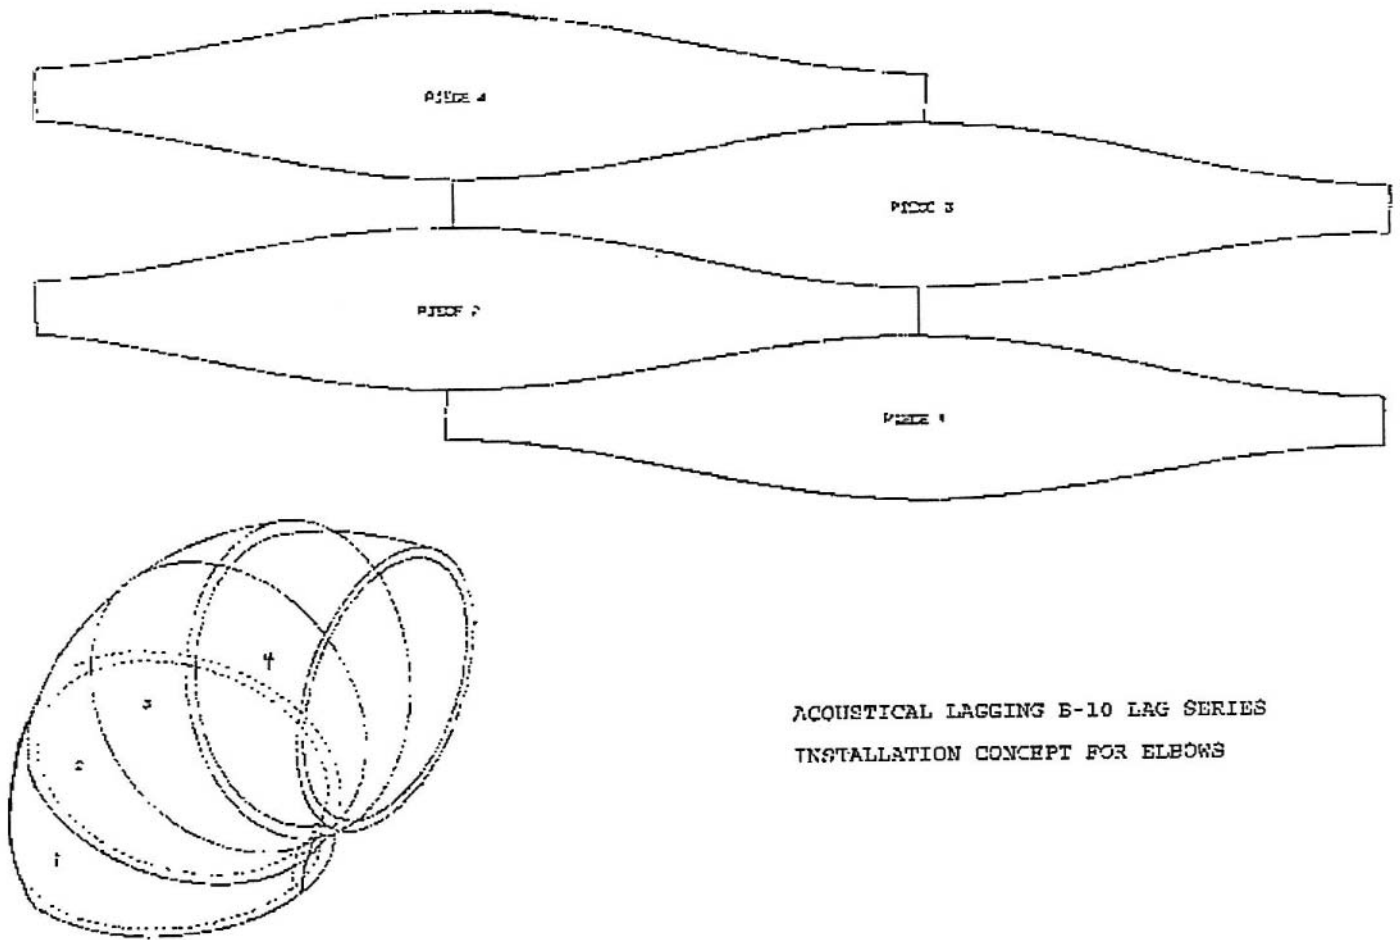

ACOUSTICAL LAGGING B-10 LAG SERIES
INSTALLATION CONCEPT FOR ELBOWS

- Soundproofing Products • Sonex™ Ceiling & Wall Panels • Sound Control Curtains • Equipment Enclosures • Acoustical Baffles & Banners • Solid Wood & Veneer Acoustical Ceiling & Wall Systems
- Professional Audio Acoustics • Vibration & Damping Control • Fire Retardant Acoustics • Hearing Protection • Moisture & Impact Resistant Products • Floor Impact Noise Reduction
- Sound Absorbers • Noise Barriers • Fabric Wrapped Wall Panels • Acoustical Foam (Egg Crate) • Acoustical Sealants & Adhesives • Outdoor Noise Control • Assistive Listening Devices
- OSHA, FDA, ADA Compliance • On-Site Acoustical Analysis • Acoustical Design & Consulting • Large Inventory • Fast Shipment • No Project too Large or Small • Major Credit Cards Accepted