



Acoustical Surfaces, Inc.

SOUNDPROOFING, ACOUSTICS, NOISE & VIBRATION CONTROL SPECIALISTS

123 Columbia Court North • Suite 201 • Chaska, MN 55318

(952) 448-5300 • Fax (952) 448-2613 • (800) 448-0121

Email: sales@acousticalsurfaces.com

Visit our Website: www.acousticalsurfaces.com


We Identify and S.T.O.P. Your Noise Problem

DEFLECTION


The More The Better

Deflection is the change in a flexible element unloaded to loaded height. It is the deflection that determines how well the isolator works. More deflection means less vibration transmission. A soft, yielding support is better than a stiff one.

There are three classes of vibration isolators based on deflection: 1) Pads deflect the least

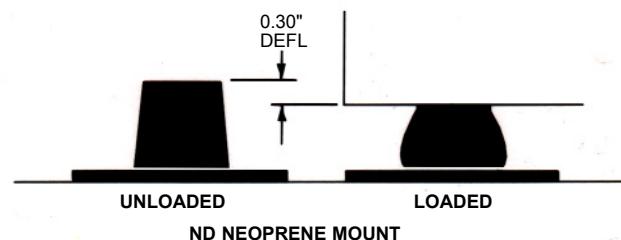

(unless stacked), so they act mostly as noise breaks. They interrupt hard surface-to-surface contact and reduce high frequency vibration. 2) Neoprene mounts and hangers deflect more and are the first step in true vibration control. 3) Spring isolators have the greatest deflection for maximum vibration reduction.

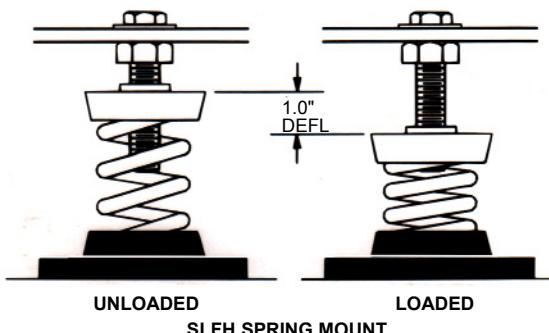

LOCATION


Sensitive Structural Supports Require Greater Deflections

The location of your equipment in the building is the main deciding factor in selecting either neoprene mounts or springs. Neoprene mountings are satisfactory under equipment on a very stiff support structure such as a ground supported concrete slab. On upper building levels where the structure can be very susceptible to vibration, springs are necessary.

The key to proper isolator selection in upper levels is to make sure isolator deflection is much greater than floor deflection.

If equipment is running below 1200 rpm, springs are required regardless of location.

(The importance of location is the same for isolating suspended equipment.)

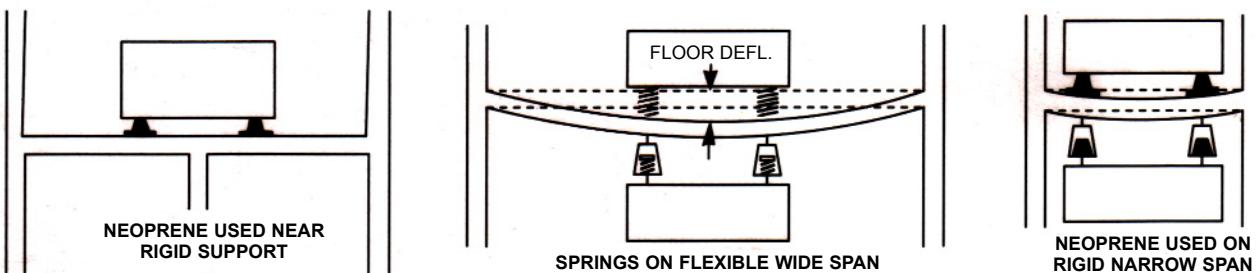

Continued on next page.

- Soundproofing Products • Sonex™ Ceiling & Wall Panels • Sound Control Curtains • Equipment Enclosures • Acoustical Baffles & Banners • Solid Wood & Veneer Acoustical Ceiling & Wall Systems
 - Professional Audio Acoustics • Vibration & Damping Control • Fire Retardant Acoustics • Hearing Protection • Moisture & Impact Resistant Products • Floor Impact Noise Reduction
 - Sound Absorbers • Noise Barriers • Fabric Wrapped Wall Panels • Acoustical Foam (Egg Crate) • Acoustical Sealants & Adhesives • Outdoor Noise Control • Assistive Listening Devices
 - OSHA, FDA, ADA Compliance • On-Site Acoustical Analysis • Acoustical Design & Consulting • Large Inventory • Fast Shipment • No Project too Large or Small • Major Credit Cards Accepted



Acoustical Surfaces, Inc.

SOUNDPROOFING, ACOUSTICS, NOISE & VIBRATION CONTROL SPECIALISTS

123 Columbia Court North • Suite 201 • Chaska, MN 55318
(952) 448-5300 • Fax (952) 448-2613 • (800) 448-0121

Email: sales@acousticalsurfaces.com

Visit our Website: www.acousticalsurfaces.com

We Identify and S.T.O.P. Your Noise Problem

SELECTION

Making It Work!

To select the proper isolation for mechanical equipment in most applications you need to ask:

1. Is slowest equipment SPEED ABOVE 1200 rpm?
If NO, use spring mountings. If YES, see 2.
Vibration from equipment running at slow or variable speeds can pass through low deflection isolators and possibly be amplified by them.
2. Is equipment LOCATED on a RIGID concrete building structure or a FLEXIBLE VIBRATION SENSITIVE structure?
If RIGID, use tall "double deflection" neoprene or springs If FLEXIBLE, use springs only.

The key is to select isolators that are "softer" than the supporting building structure. Ideally isolator deflection should be more than three times greater than the deflection or "sag" of the support.

3. What is the equipment's "corner weight" or weight at each mounting point?

The load rating of each spring or rubber mounting must be matched with the portion of the equipment's weight at the corners or mounting points. Equipment corner weights usually differ and require the use of mountings with different load capacities. Oversized mountings may be used but can reduce vibration control. Select mountings with load capacities equal to or slightly greater than the portion of the equipment weight they are to support.